


.:Montageanleitung.:Notice de montage.:Installation instructions.:Montážní návod.:


SPRCHOVÝ KOUT

CLDO1

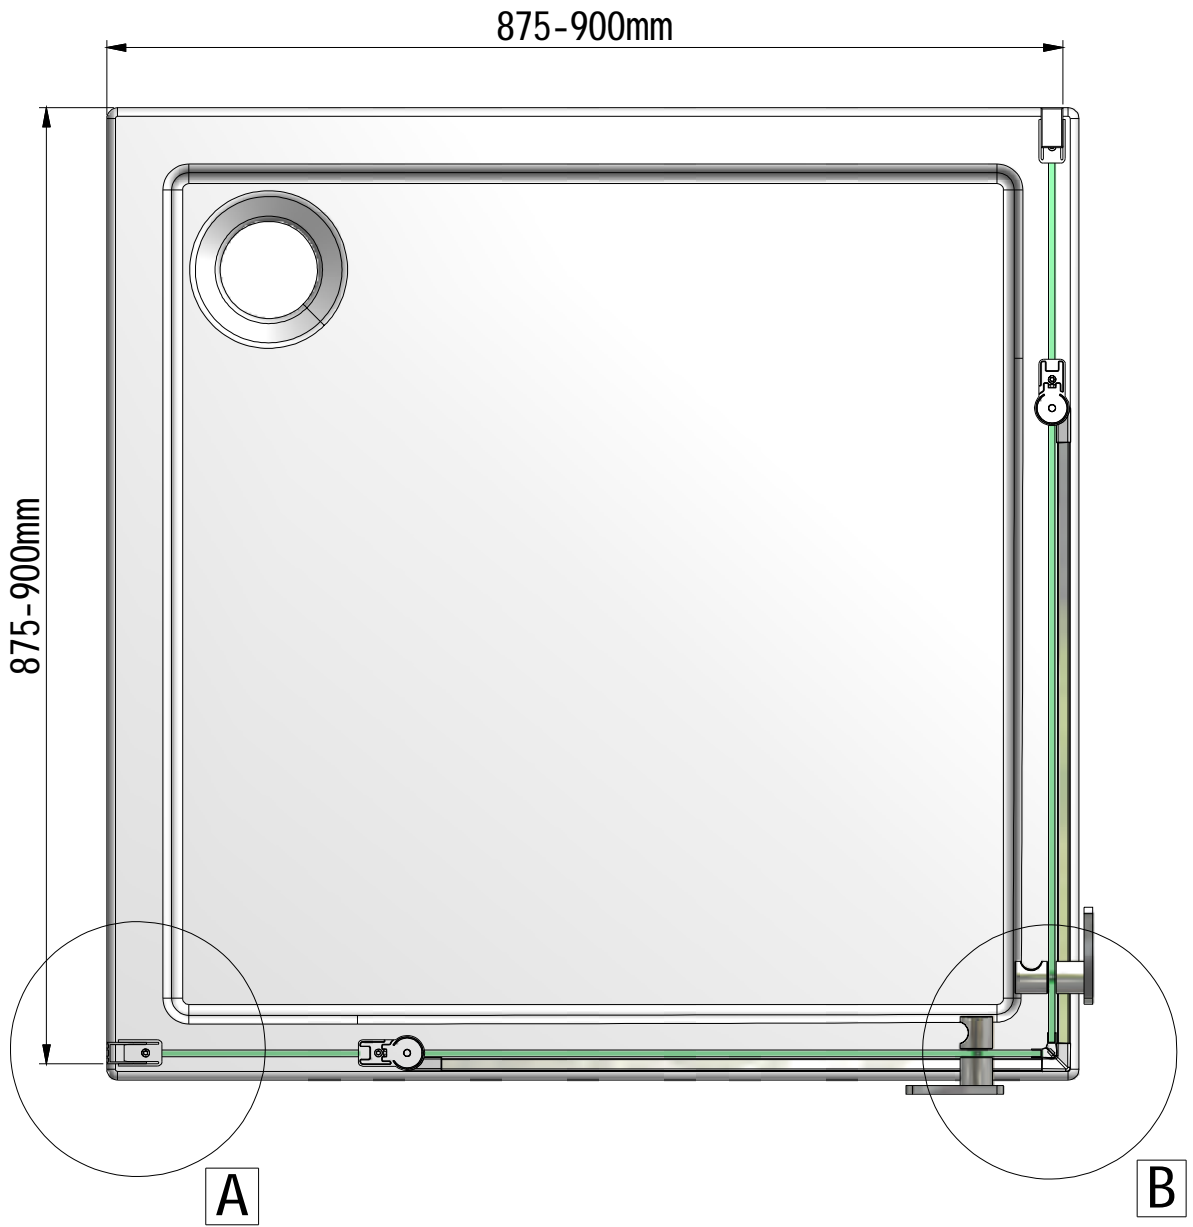





A (1:2)

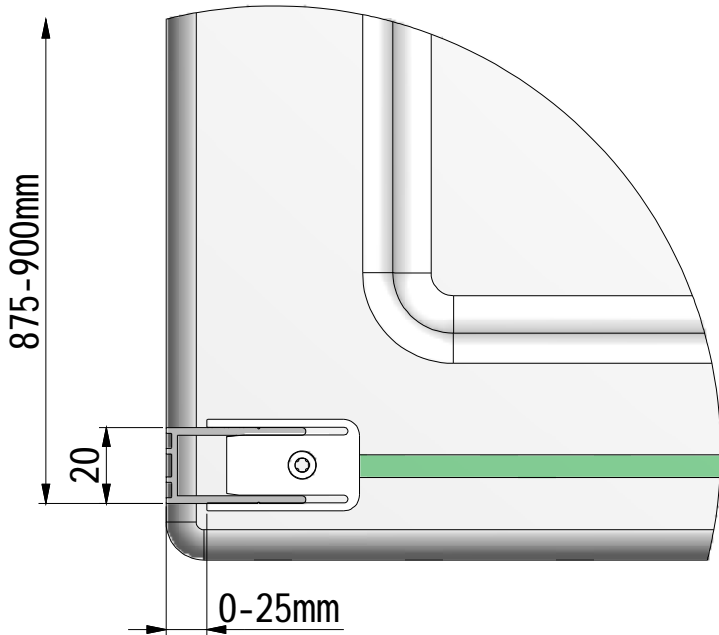


B (1:2)

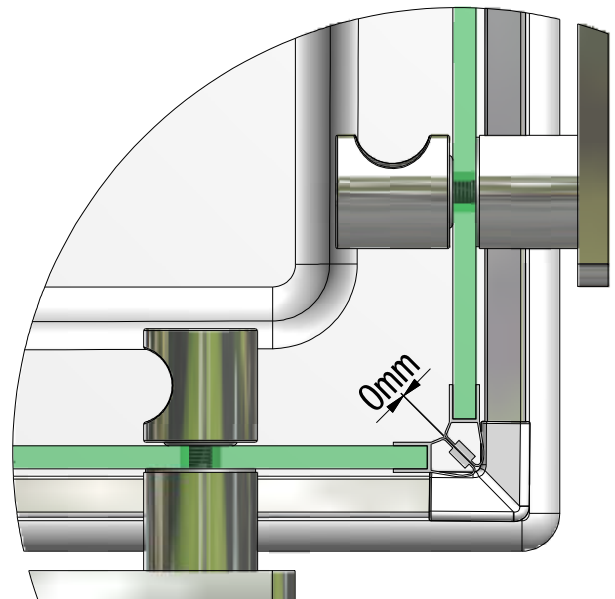

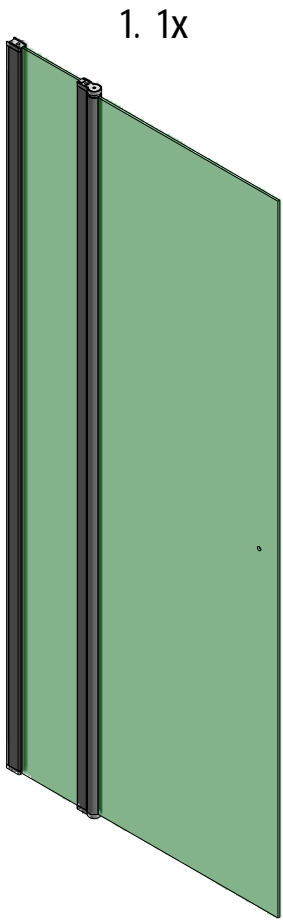

21. 1x
M8538



20. 1x
MA5192




2. 1x
P2388



3. 1x
MA0854




19. 1x
MA0853



4. 1x
P4035



5. 5x
M0511

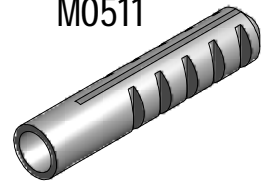

6. 5x
M0811



7. 5x
M0768




8. 3x
M0806



9. 3x
M1907




13. 1x
P2997

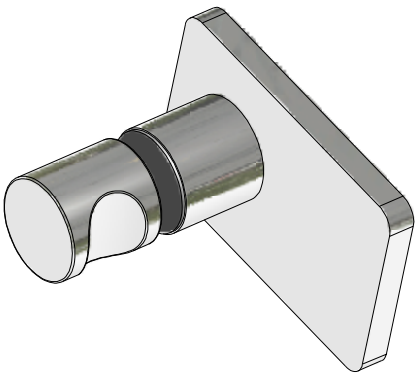


14. 1x
M8018




10. 1x
M0750

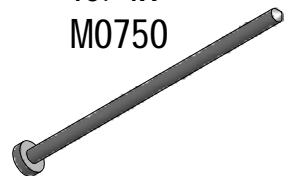


11. 1x
M0513




15. 1x
M8317

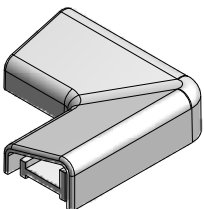


16. 1x
M8312

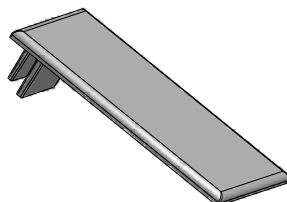


17. 1x
M8309




18. 1x
M8316






12. 1x n2,8
M0838

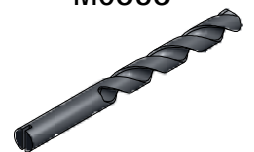

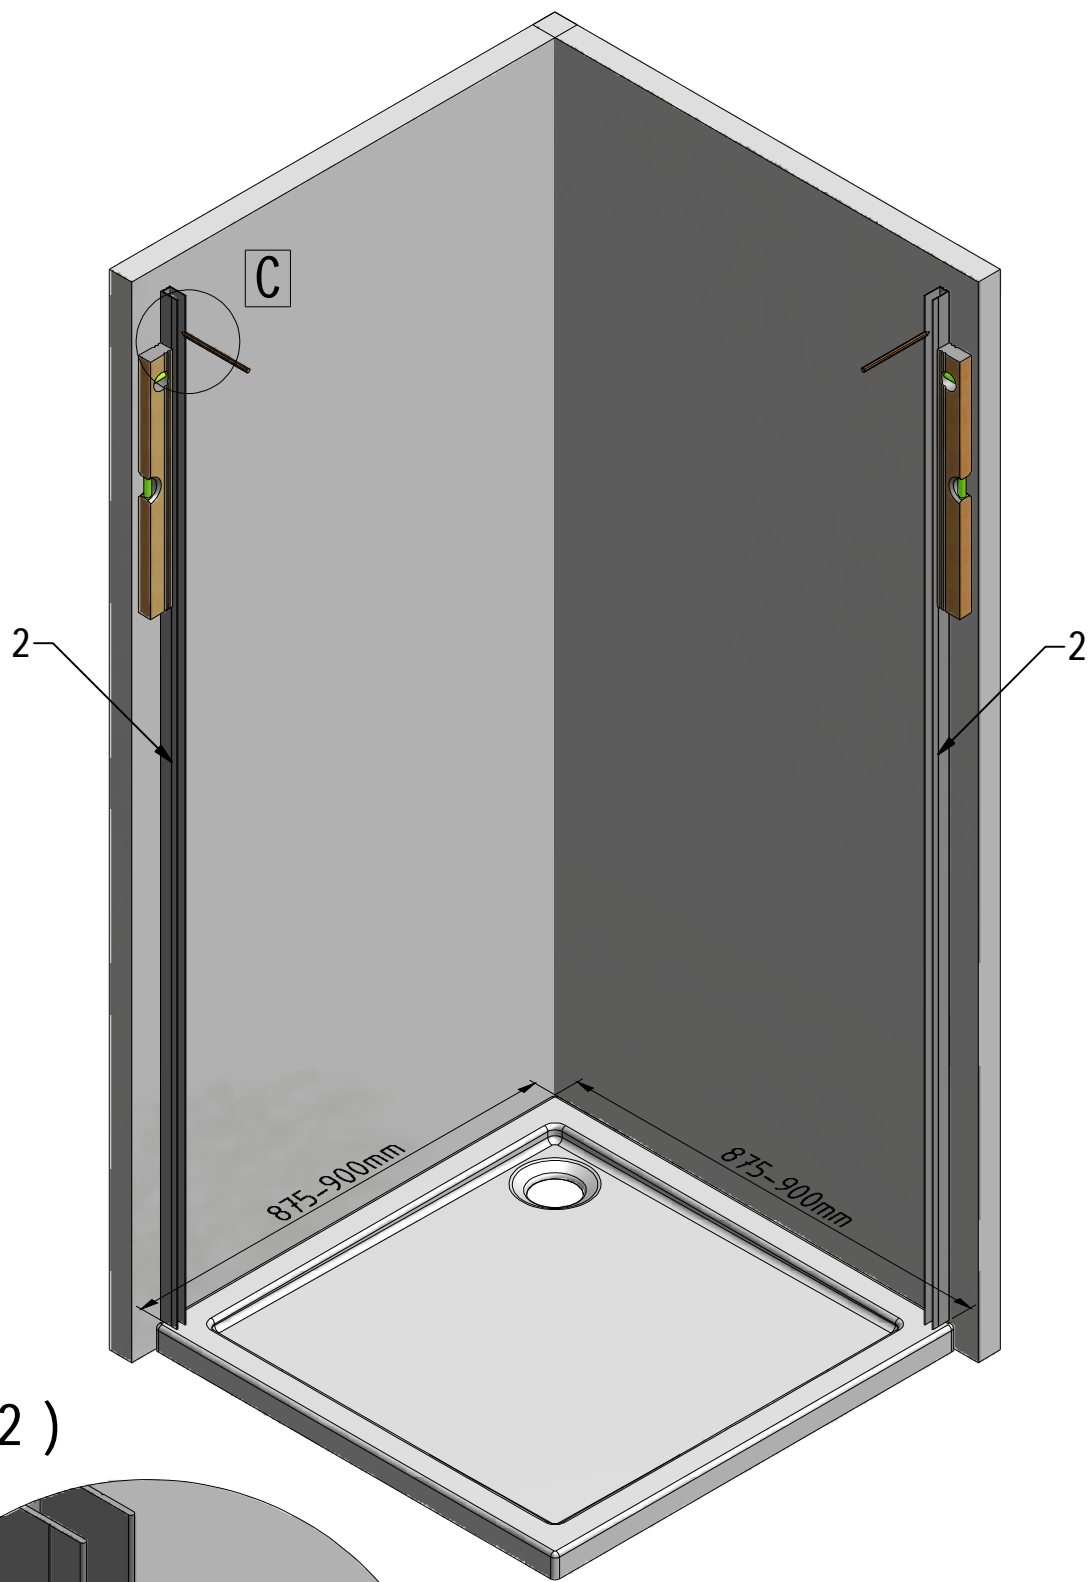


C (1 : 2)

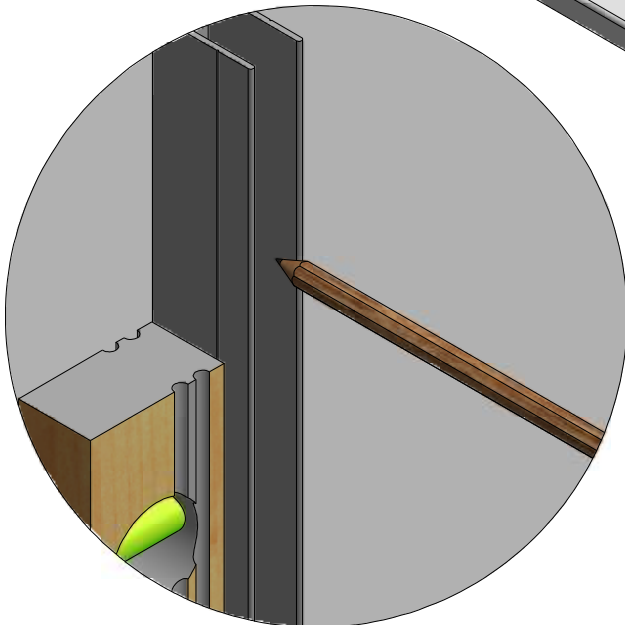


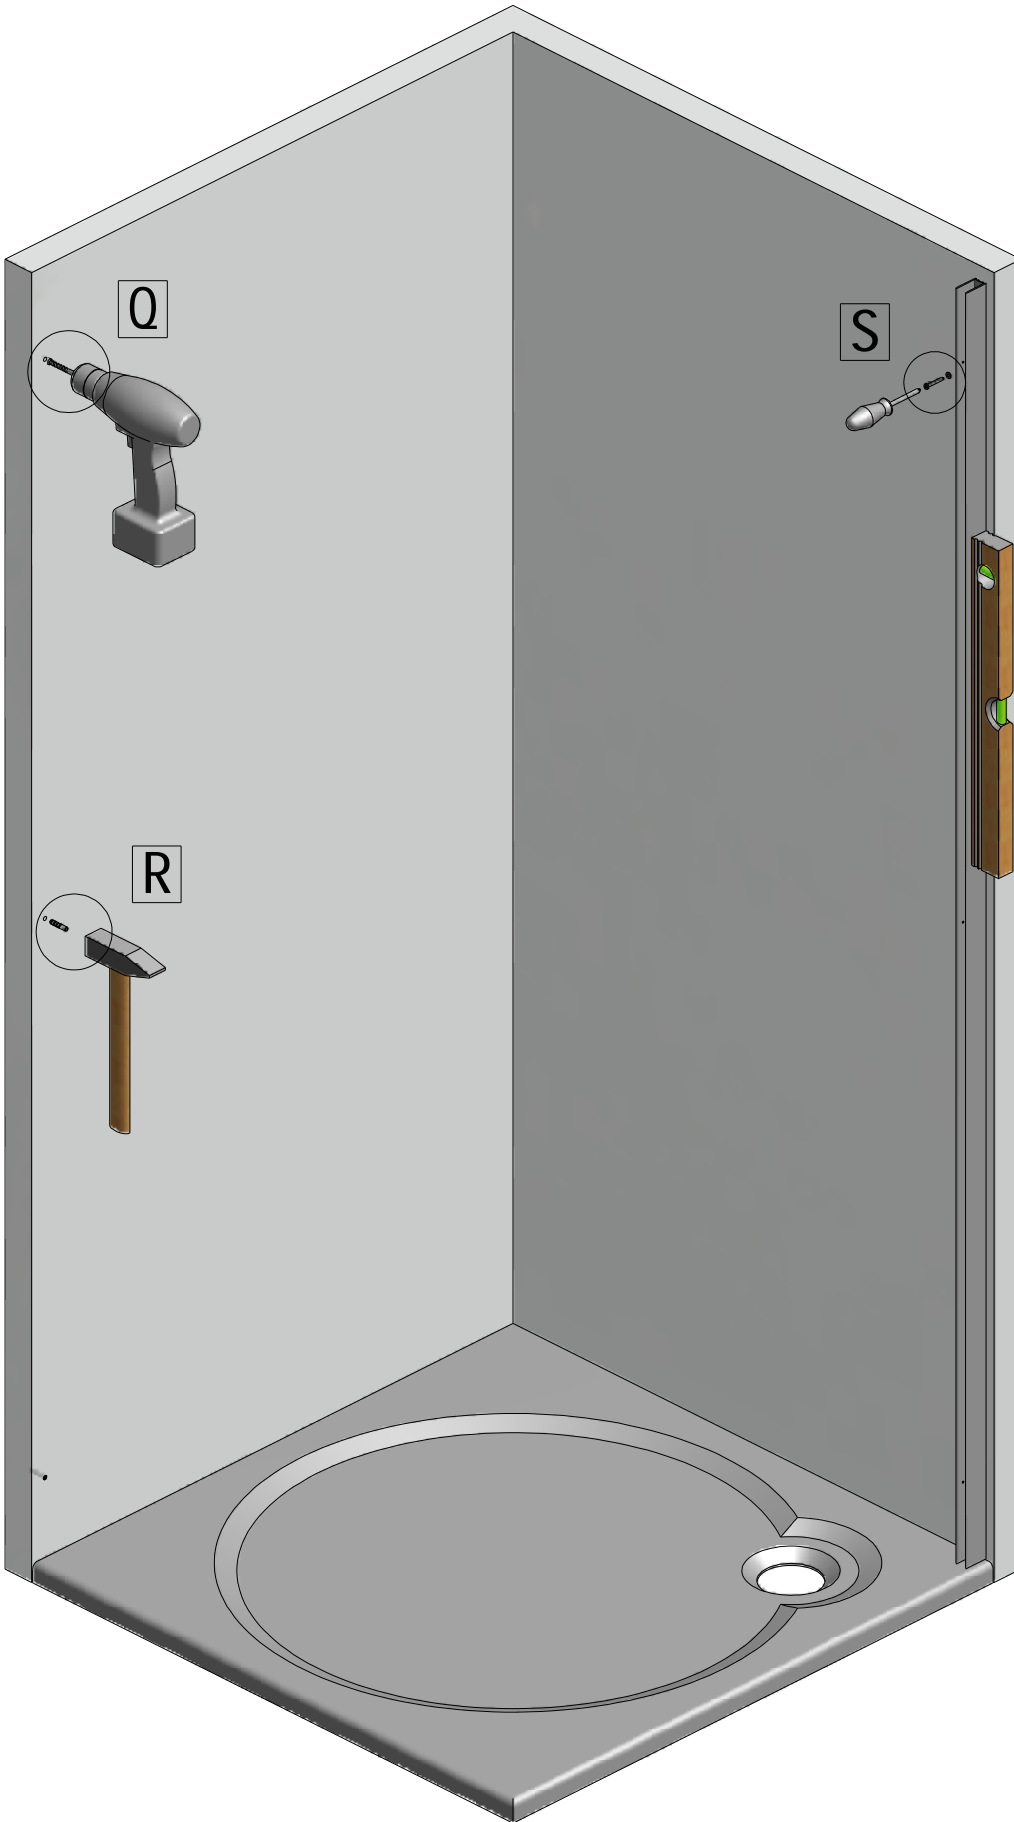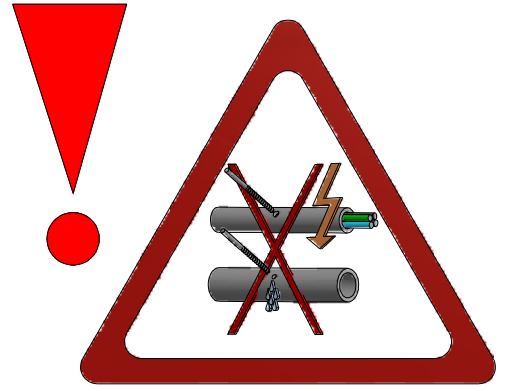


Q 6x

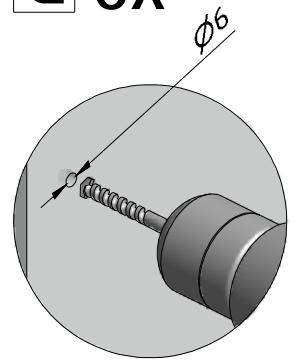


R 6x

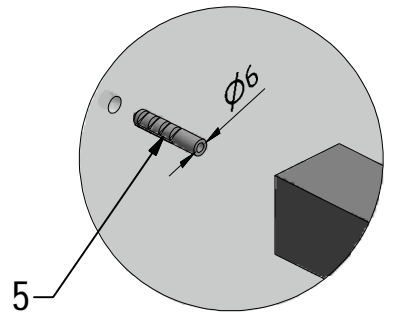


S 6x

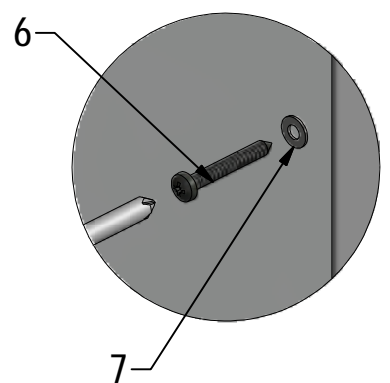




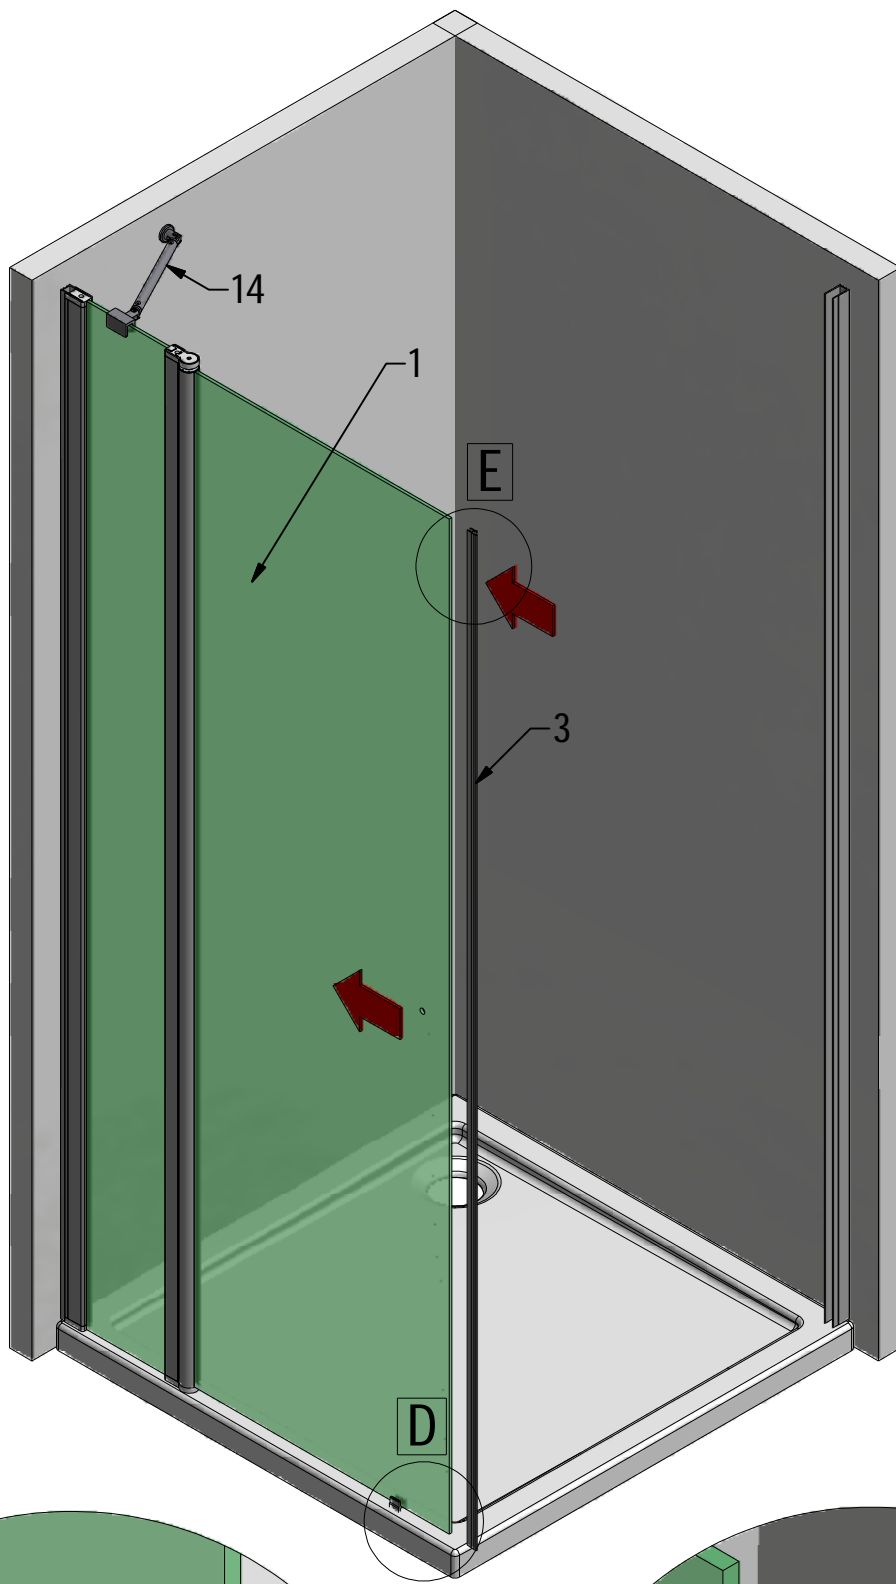









D (1 : 2)

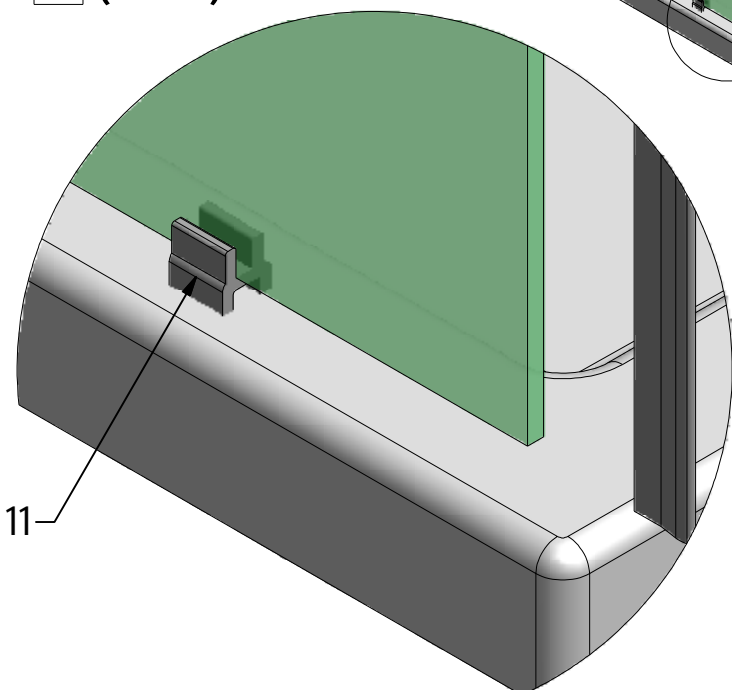


E (1:2)

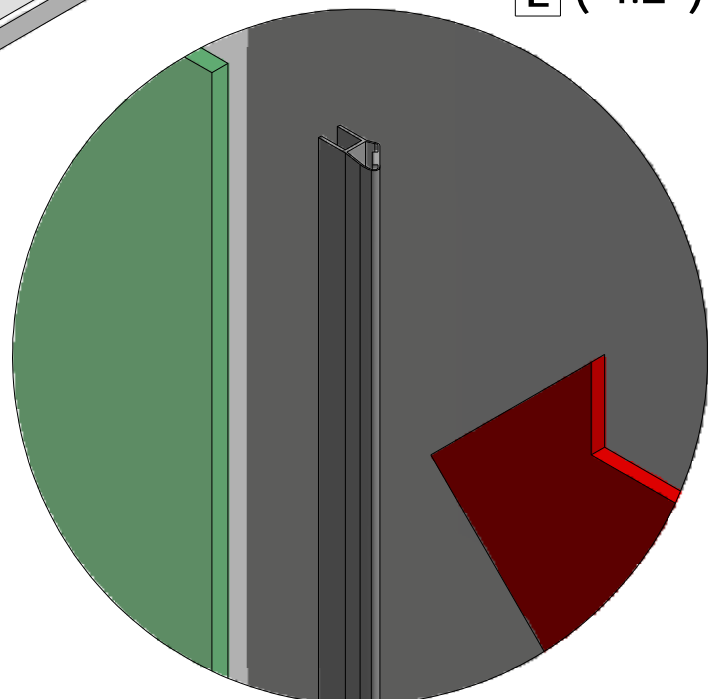

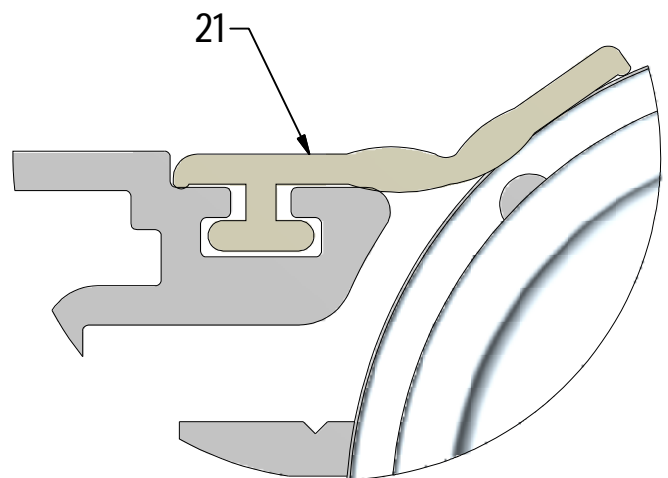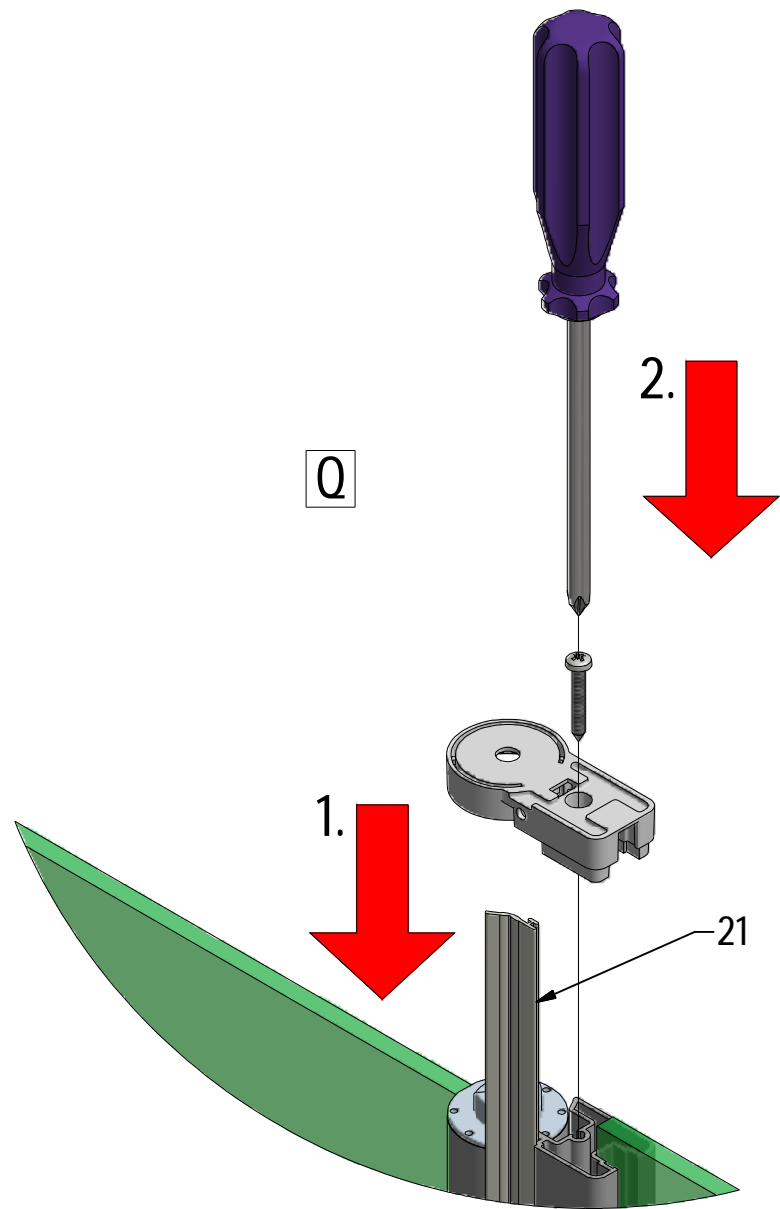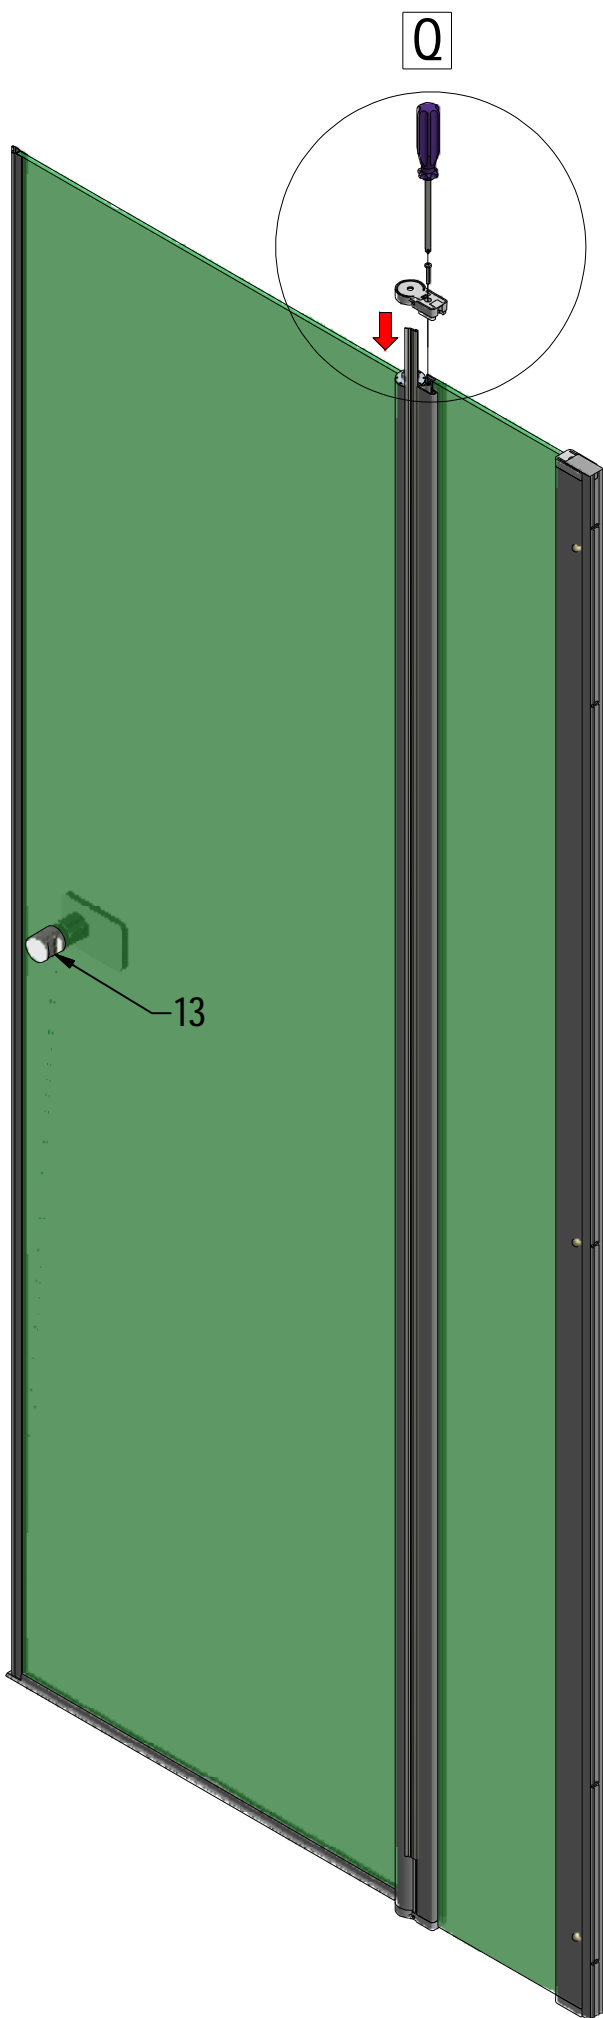


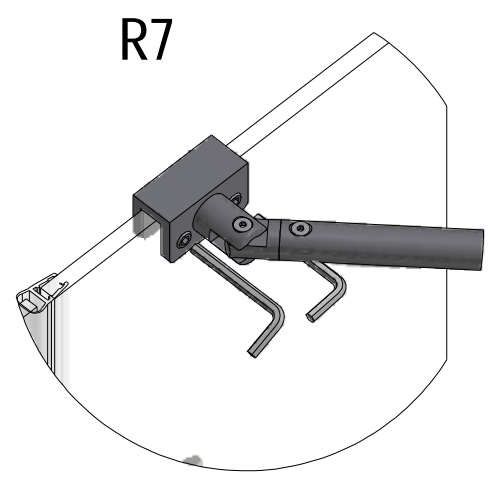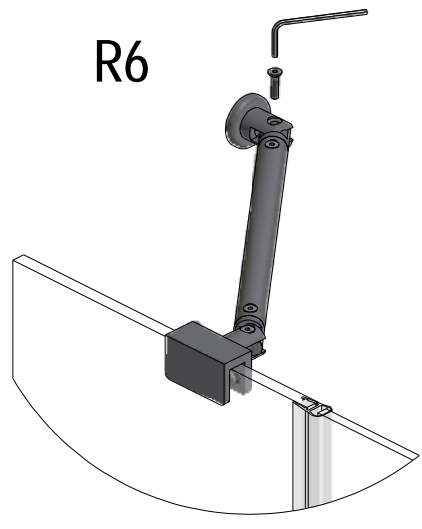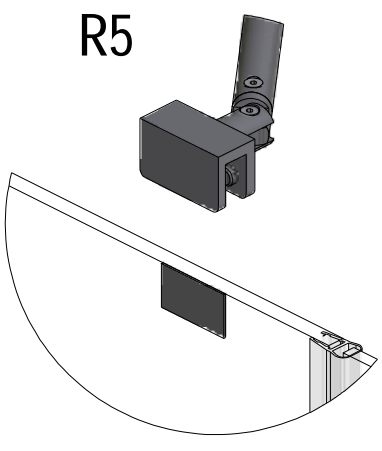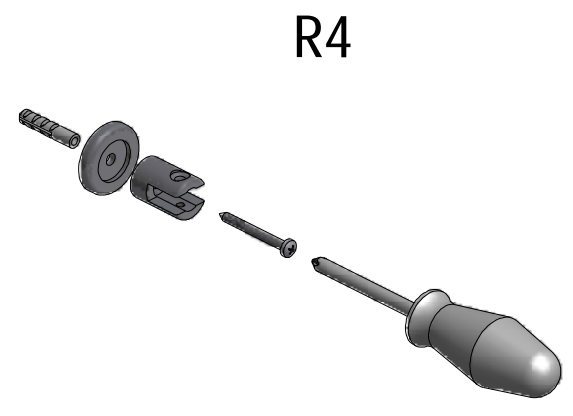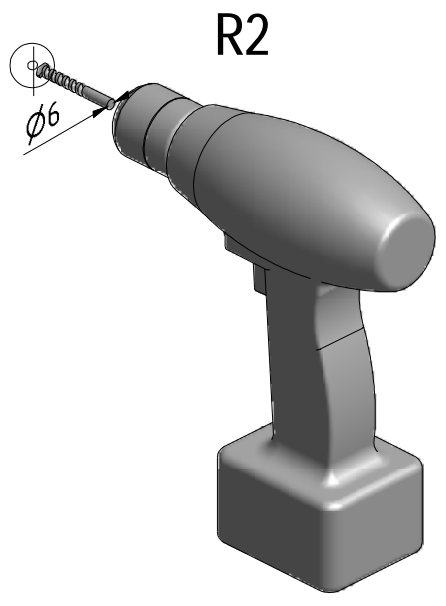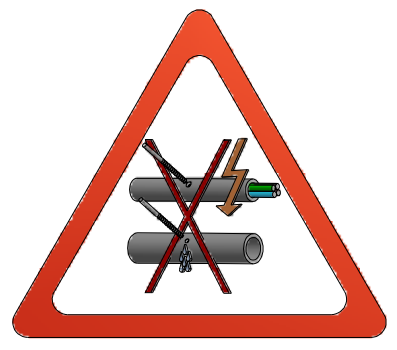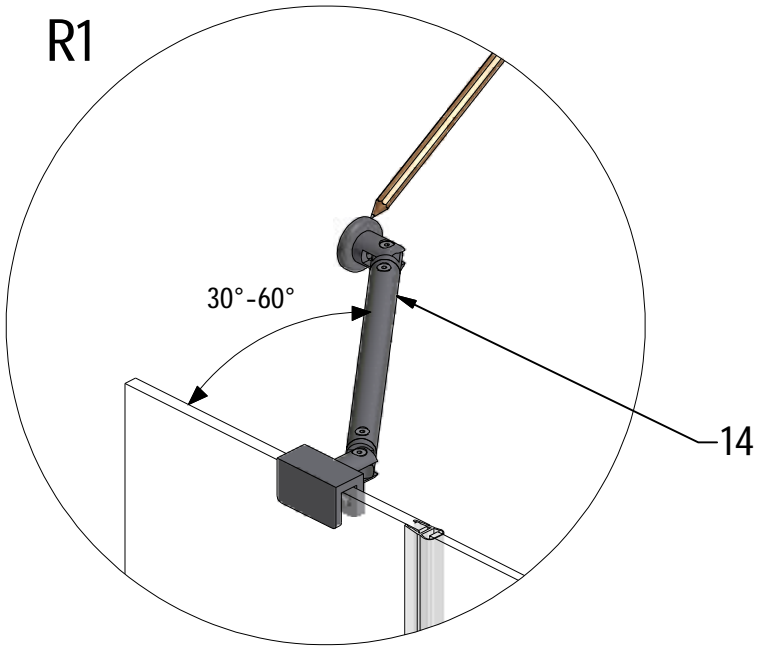



F (1 : 2)

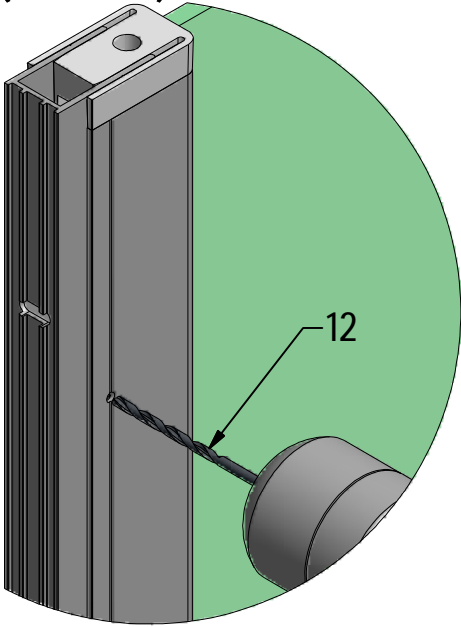


G (1 : 2)

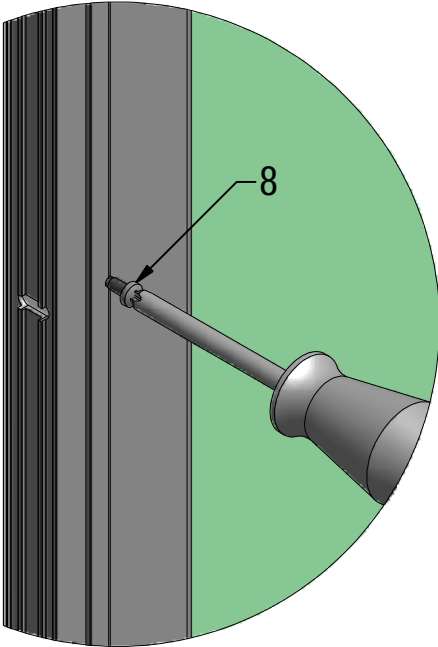


H (1 : 2)

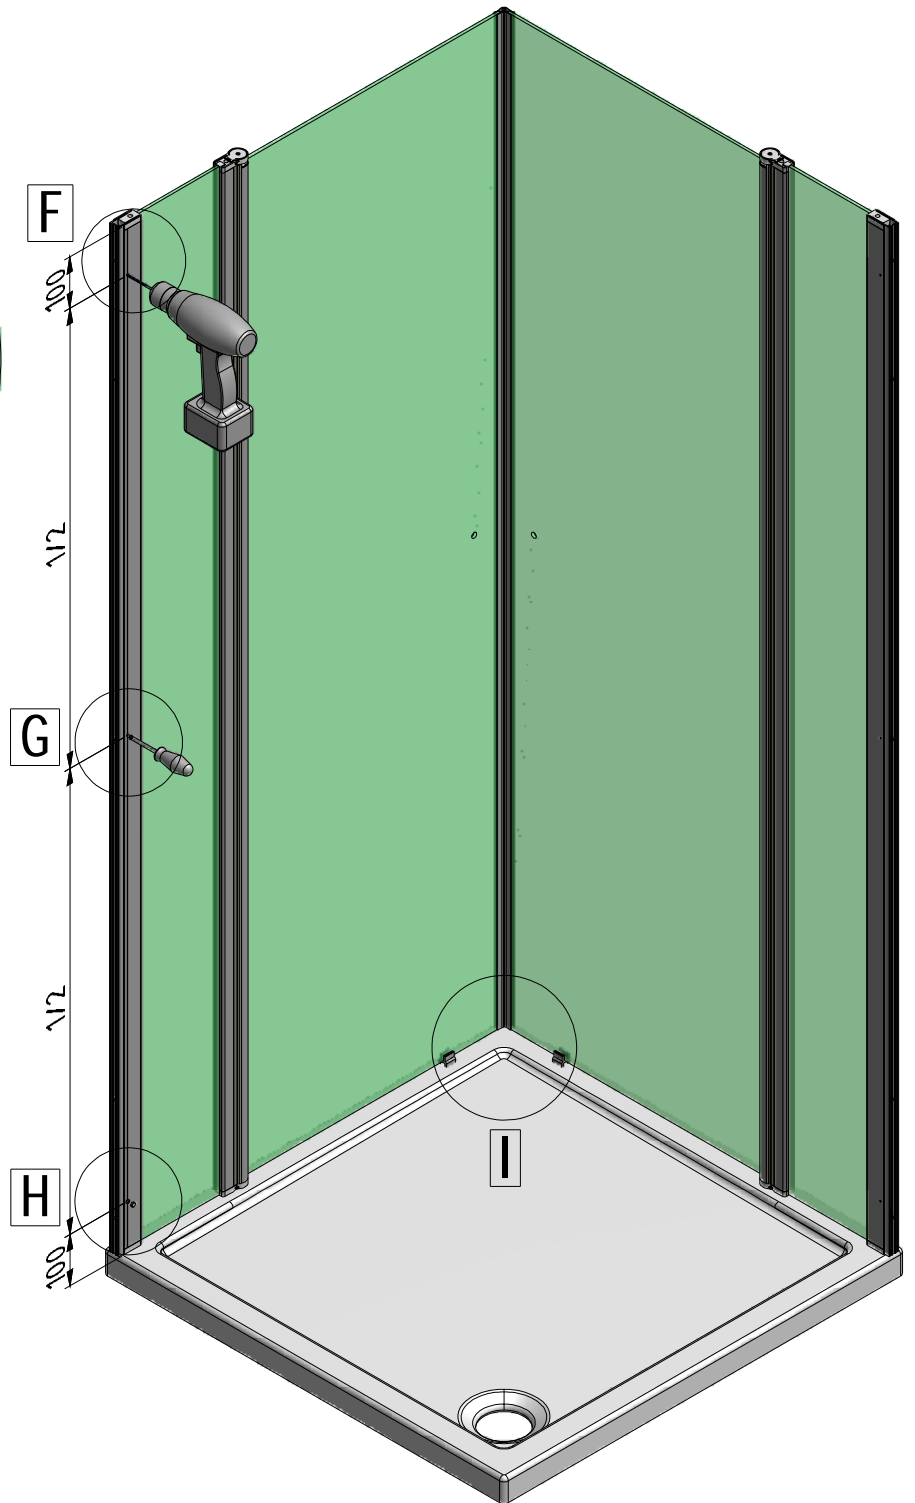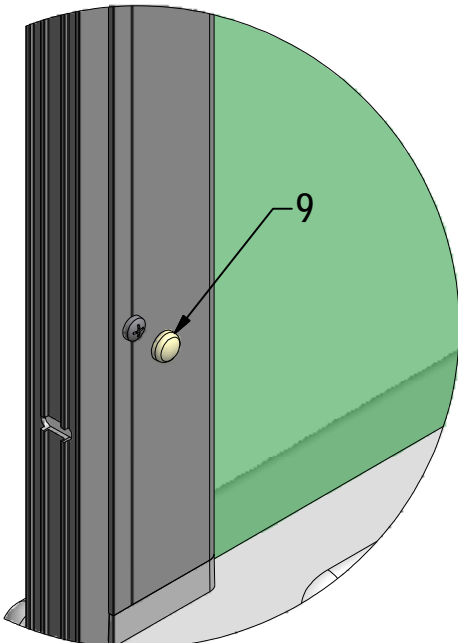


I (1 : 3)

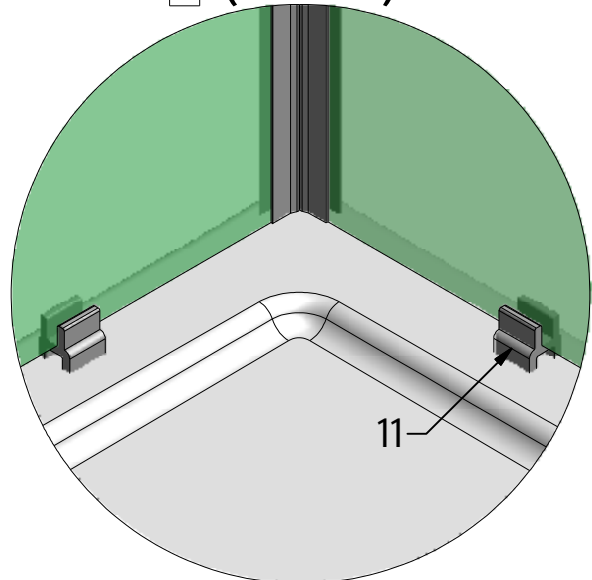


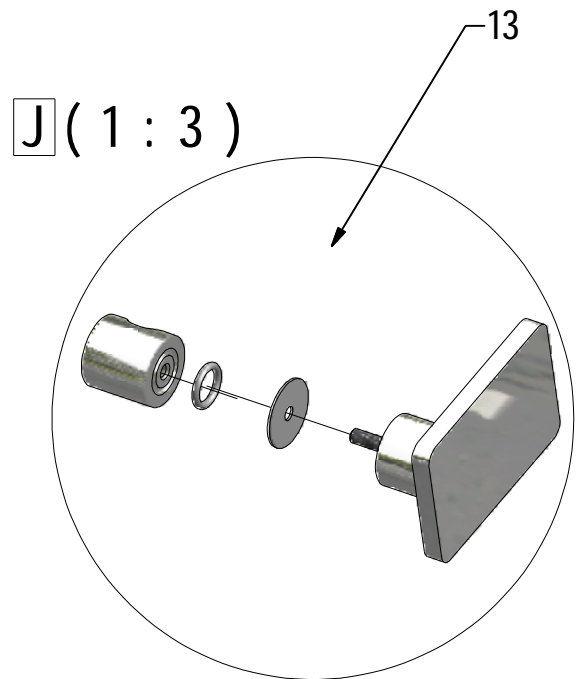


K (2:3)

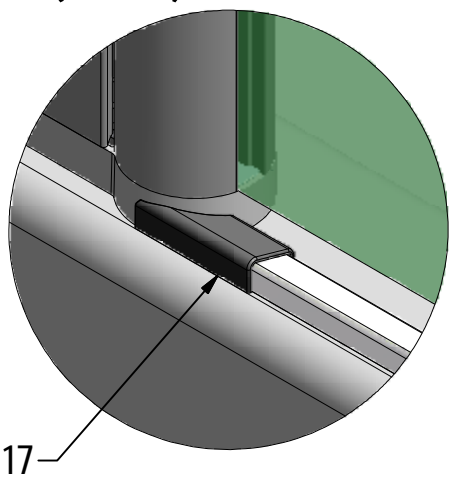


L (2:3)

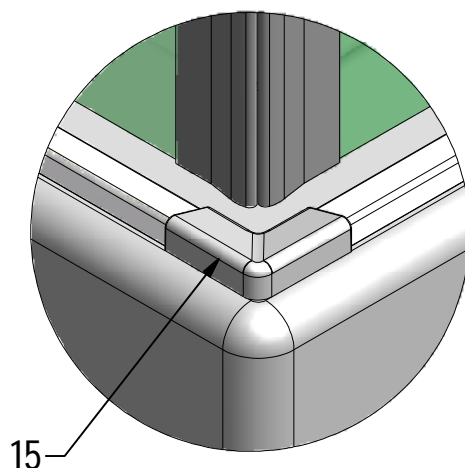


M (2:3)

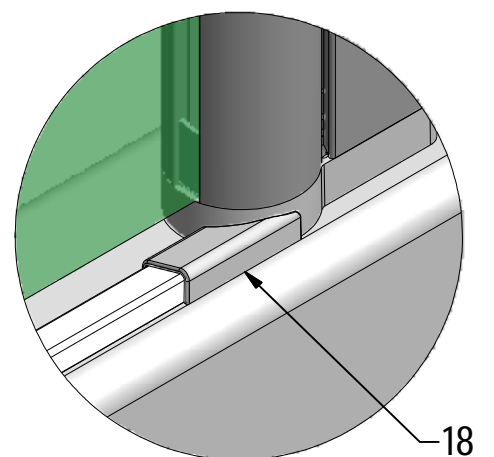

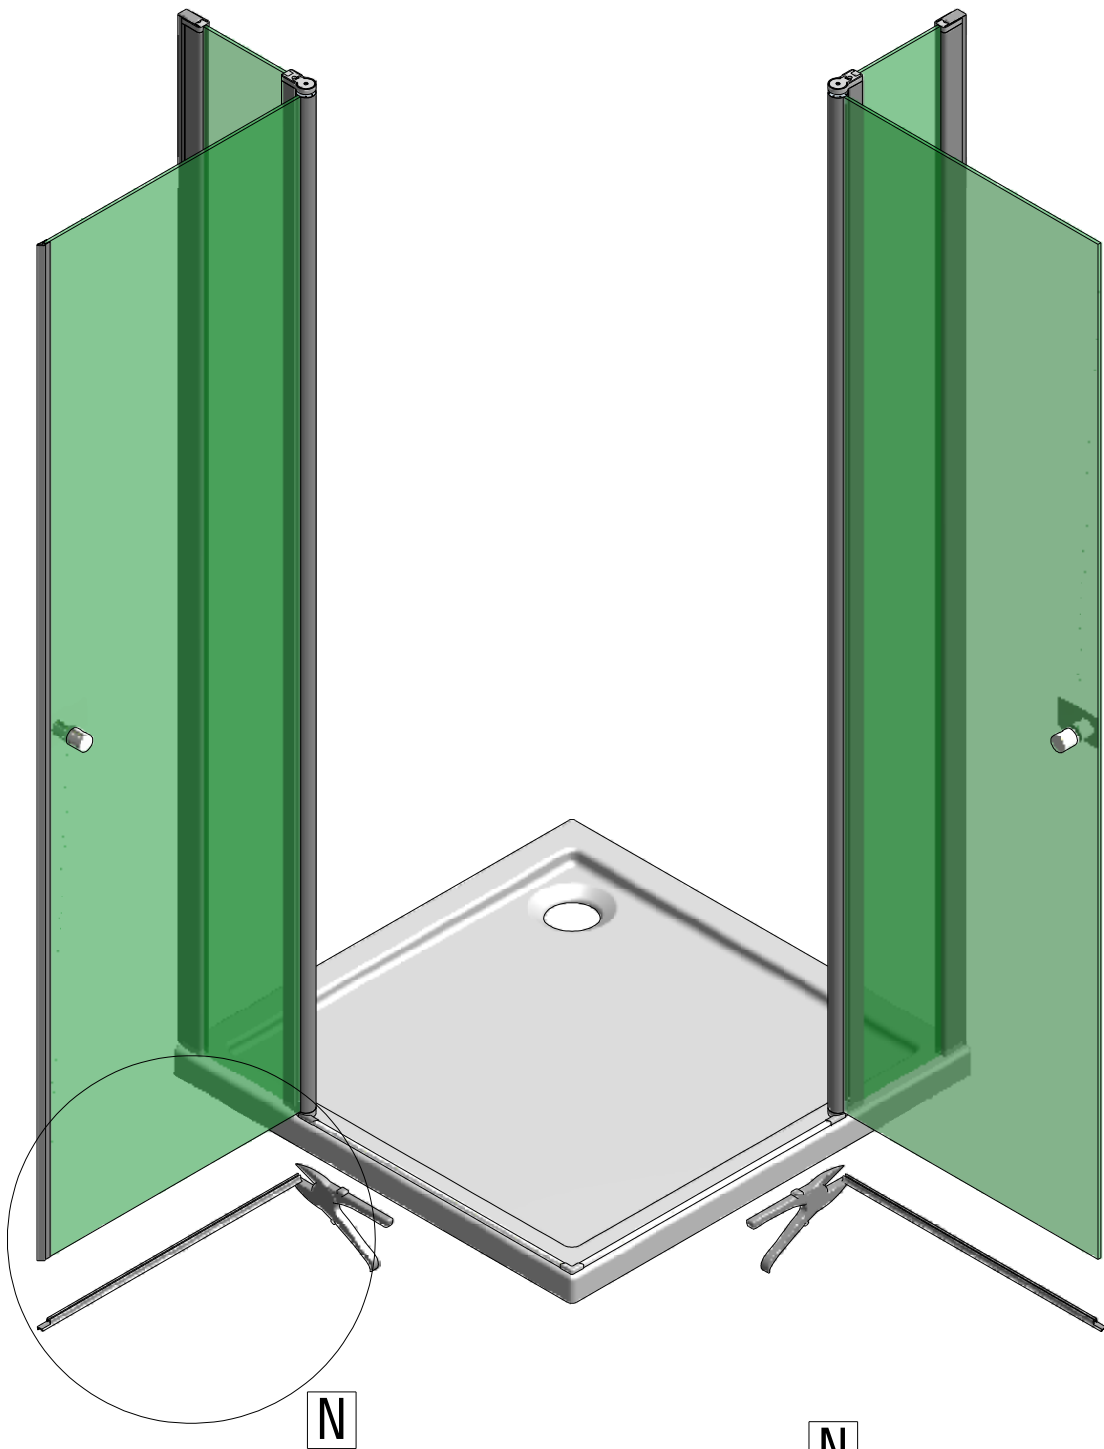

N


N

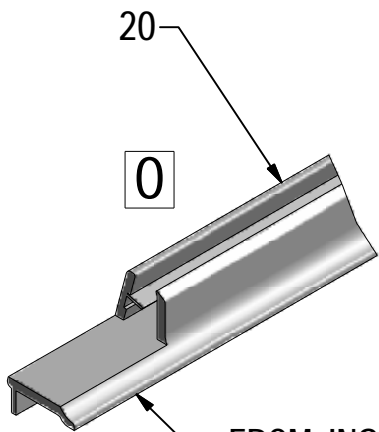



20


0

-FROM INSIDE OF
SHOWER ENCLOSURE
-Z VNITŘNÍ STRANY
SPRCHOVÉHO KOUTU

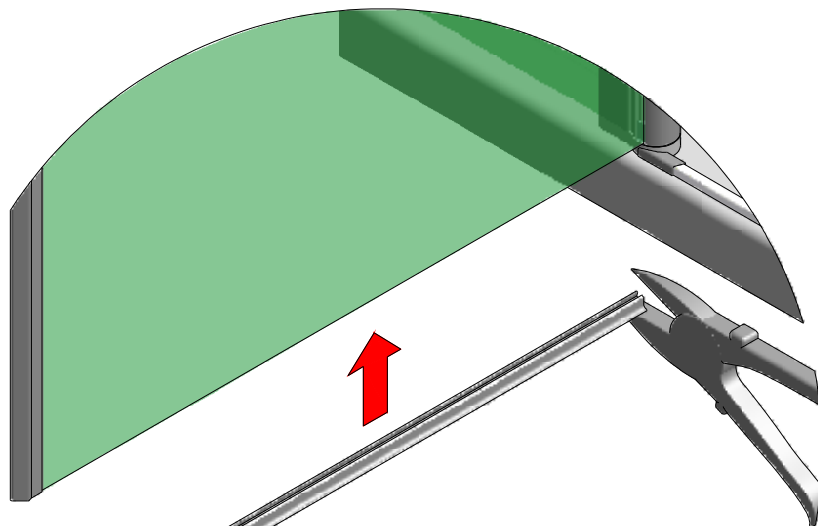

0

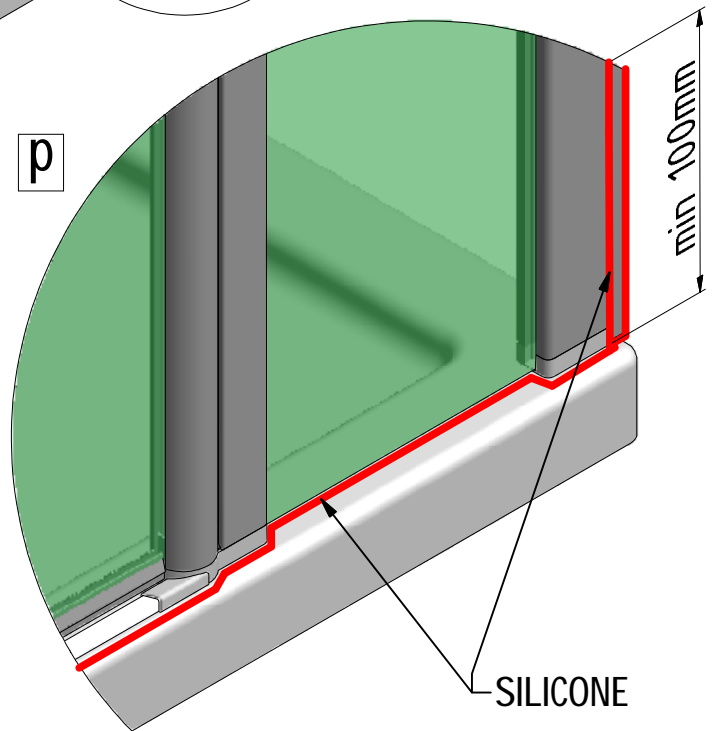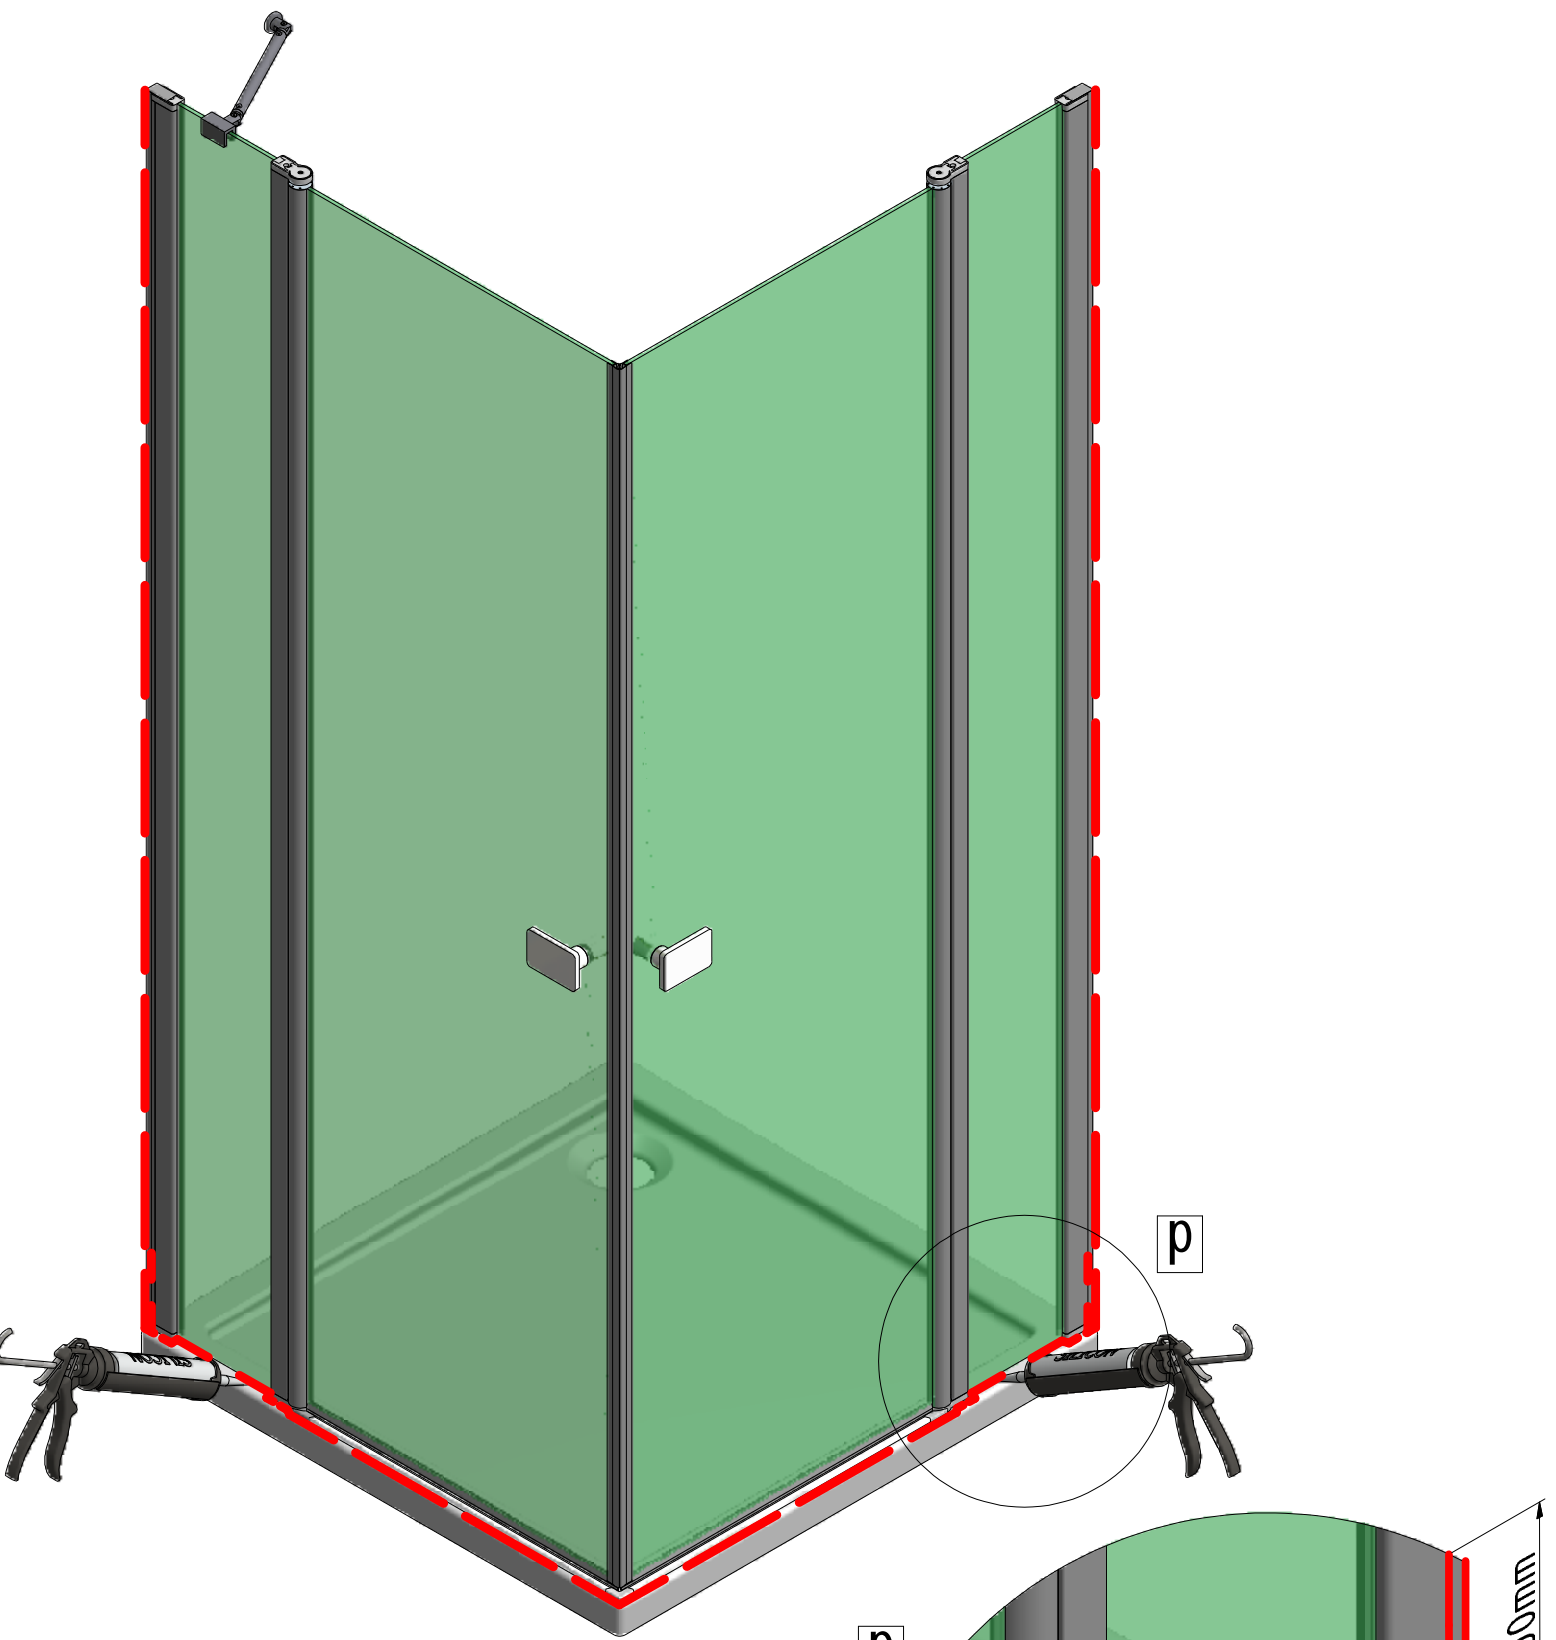

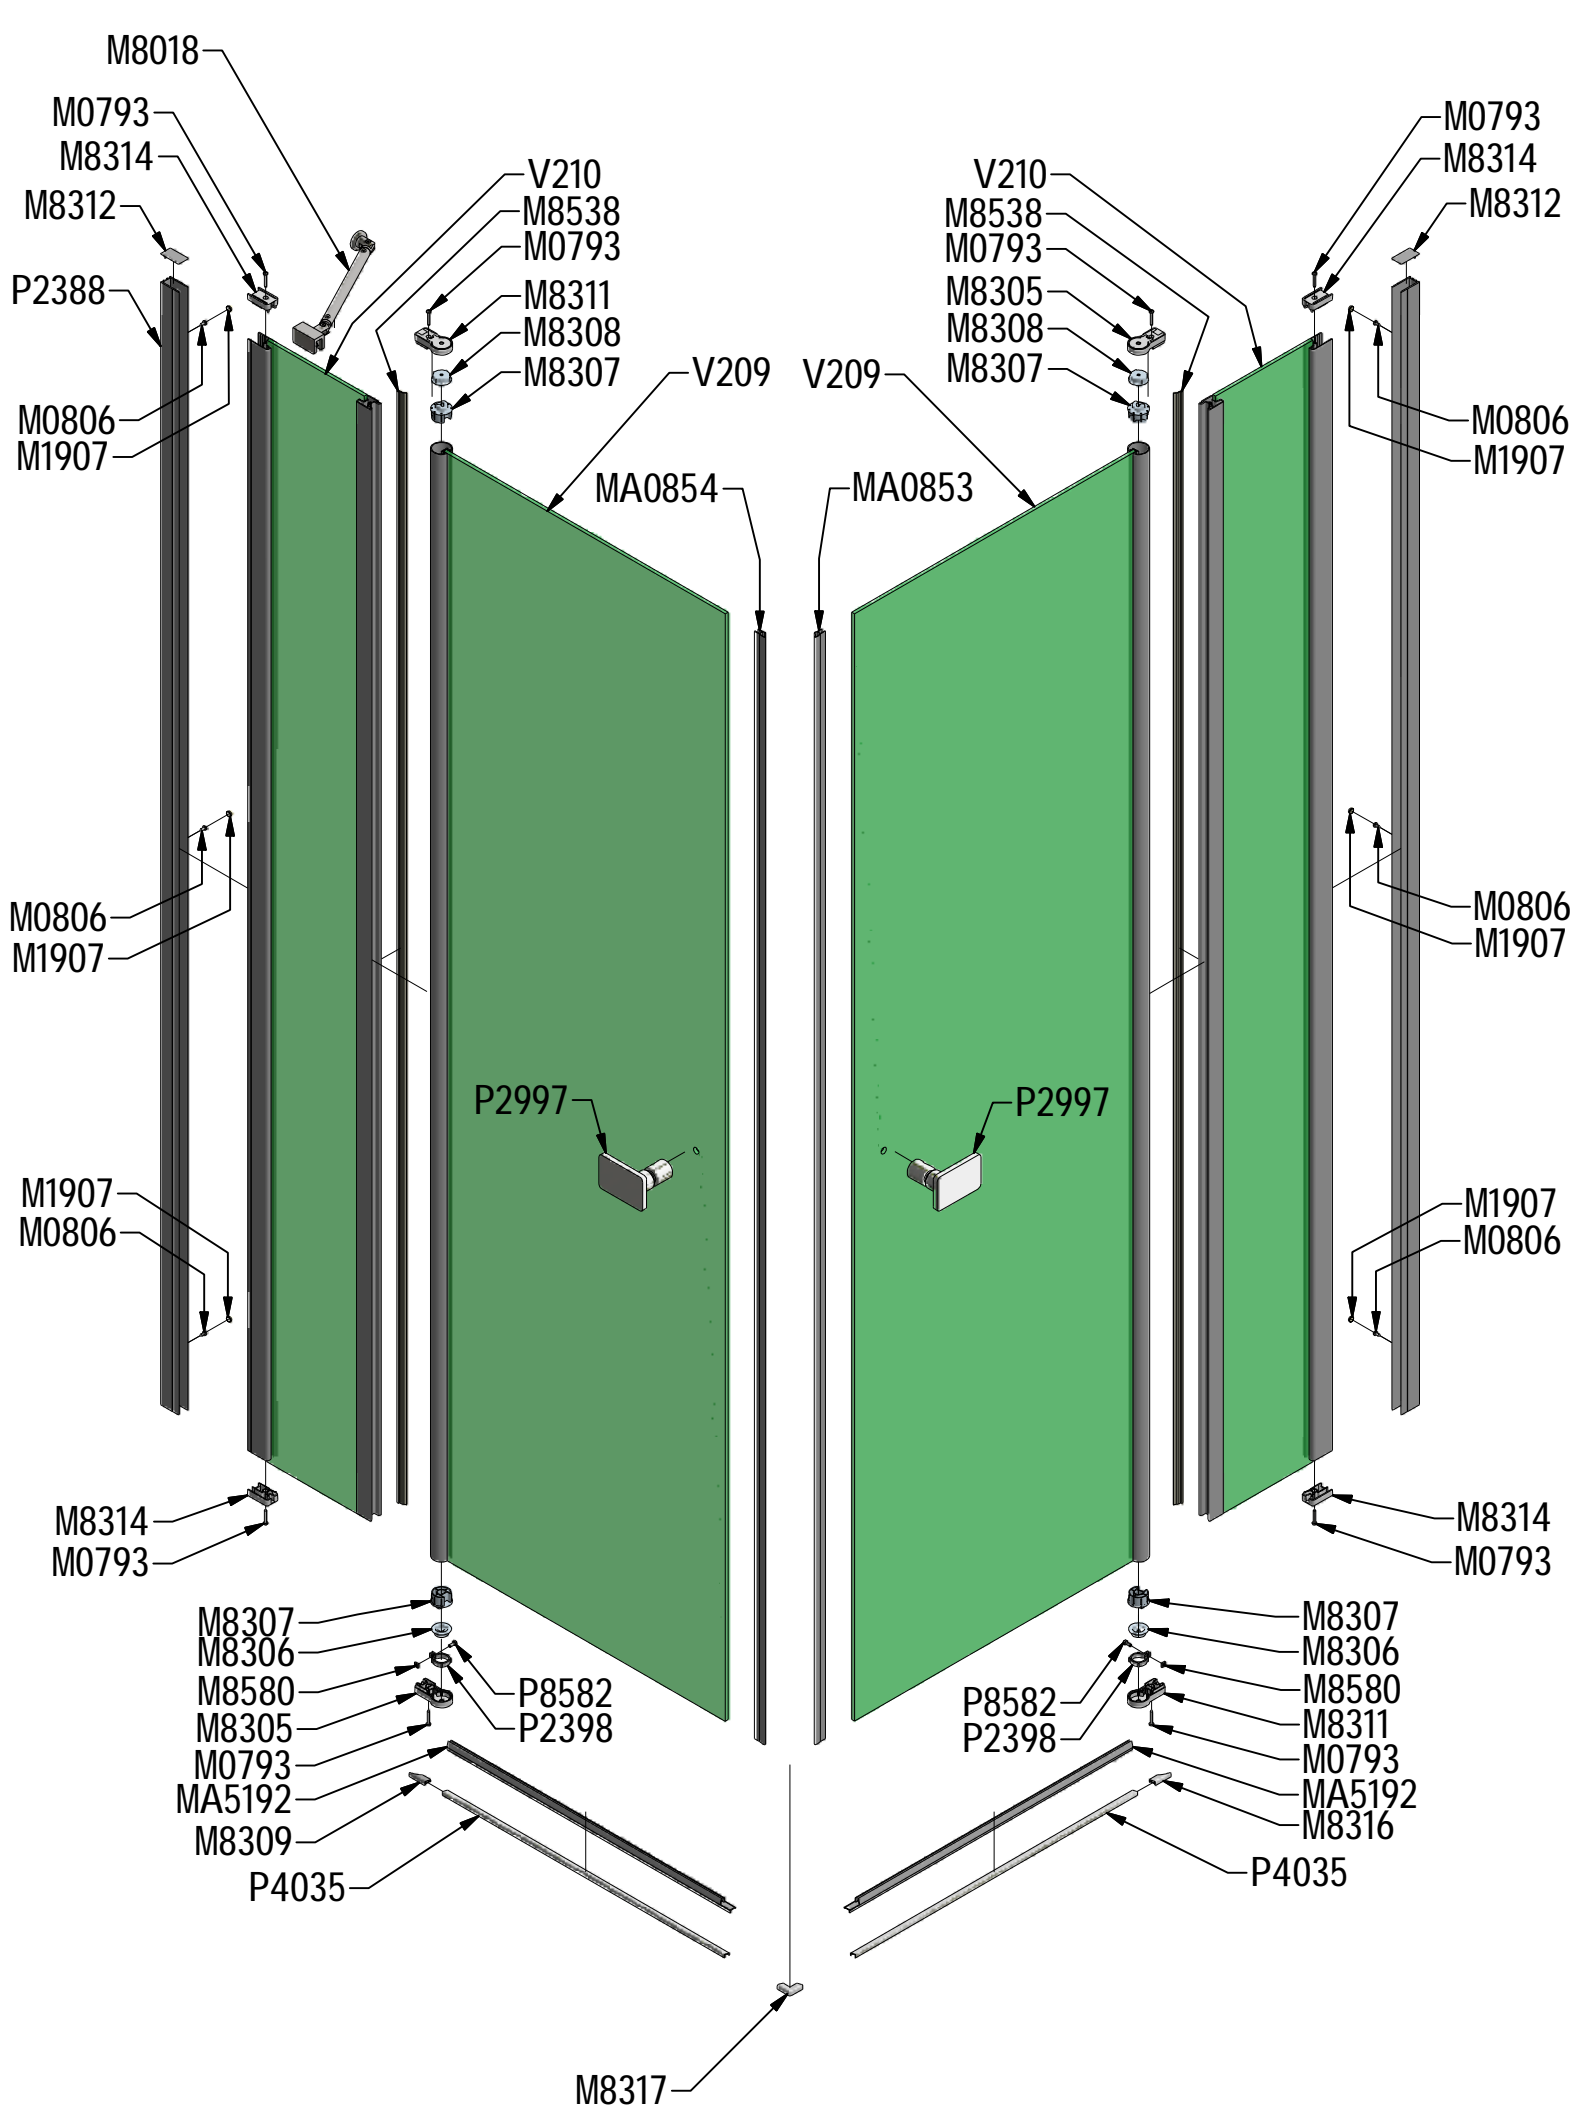

V209	900	elox+clear glass	ND02-0781-01-02
		brillant+clear glass	ND02-0782-00-02
V210	900	elox+clear glass	ND03-0708-01-02
		brillant+clear glass	ND03-0709-00-02